

CRESTRON AUTOMATE VX

MULTI-CAMERA SPEAKER TRACKING SOLUTION

LATEST UPDATE: 30/01/2025 (V.1.0)

Copyright Statement

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without the prior written permission of the publisher, except in case of brief quotations embodied in critical articles or reviews. Contents are subject to change without prior notice.

Copyright © 2025 by Televic Conference NV. All rights reserved.

The authors of this manual have made every effort in the preparation of this book to ensure the accuracy of the information. However, the information in this manual is supplied without warranty, either express or implied. Neither the authors, Televic Conference NV, nor its dealers or distributors will be held liable for any damages caused or alleged to be caused either directly or indirectly by this book.



Trademarks

All terms mentioned in this manual that are known to be trademarks or service marks have been appropriately capitalized. Televic NV cannot attest to the accuracy of this information. Use of a term in this book should not be regarded as affecting the validity of any trademark or service mark.

Document History

Version	Date	Description
1.0	30/01/2025	First publication

Meetings are more collaborative when everyone can engage more naturally. Automate VX employs multiple optical zoom cameras and voice-activated switching to ensure remote participants enjoy a clear, crisp view of everyone in the room and in-person participants never have to think about where to look to follow the conversation.

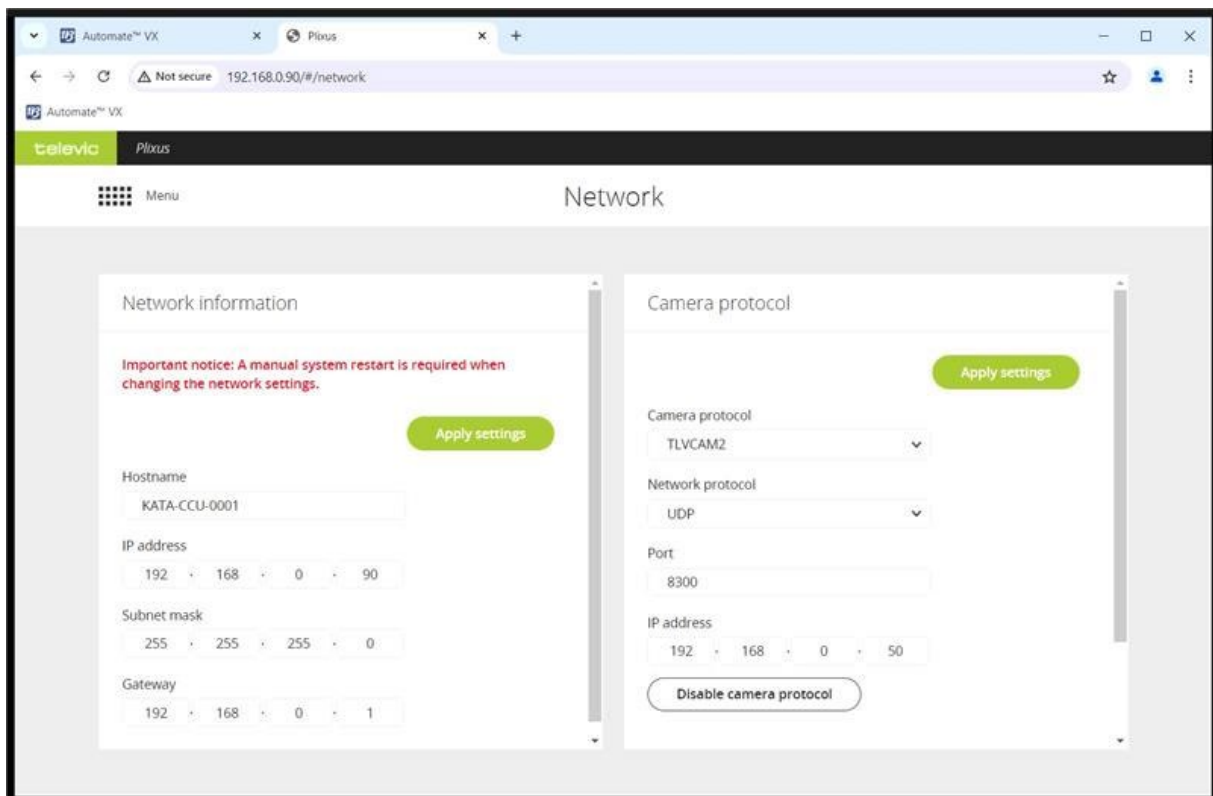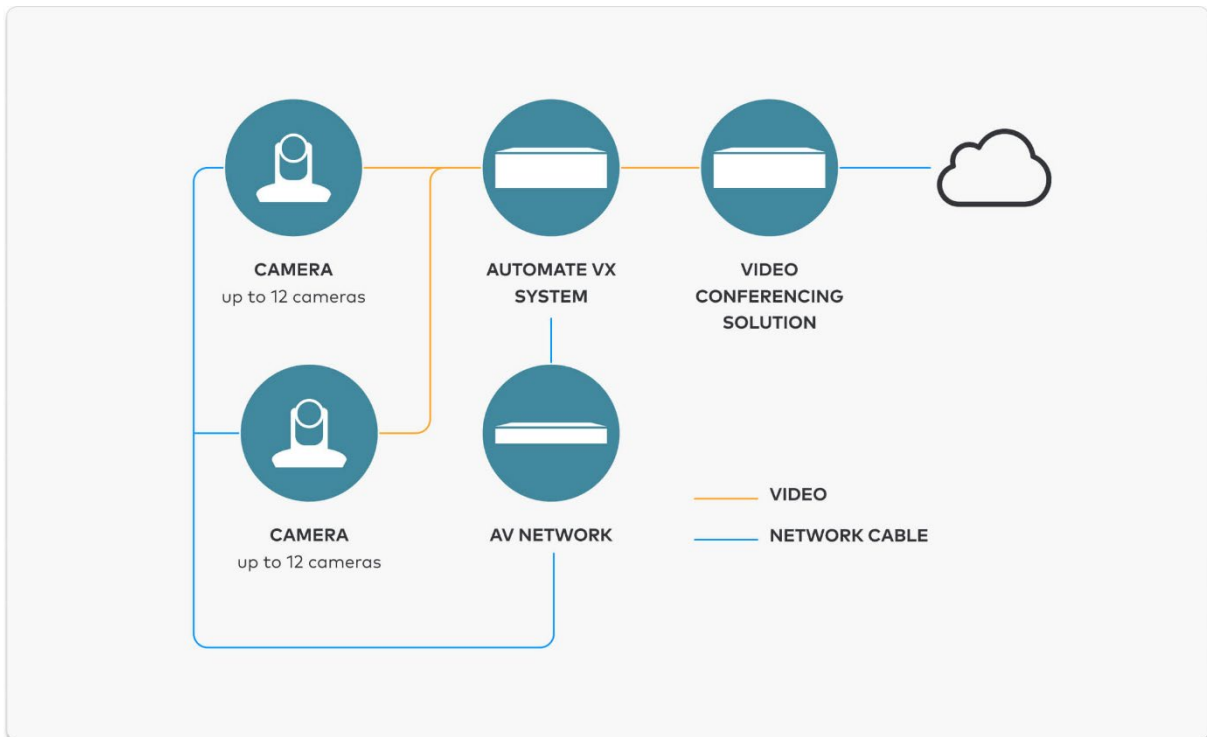

On the Televic system:

1. Enable Camera Protocol.
2. Then set the following:
 - a) Camera Protocol: TLVCAM2
 - b) Network Protocol: UDP Port: 8300
 - c) Enter the IP address of the Automate VX server in the IP Address field

Automate VX support inquiries come through our standard support channels, the regional contact details are found here: <https://www.crestron.com/Support#>

Crestron configuration manual for Televic integration in AutomateVX:

<https://documents.televic.digital/conference/index.php/s/2myQf2CyTkpciJf>