Confidea F

Confidea Flushmount for Discussion and Voting

Quick Start

Language selection button

Information display
Displays voting results, volume and channel information

Volume control
Change the volume of the headphones

Headphone connector

NEXT button (only on chairman unit)
Grants the floor to the next delegate in the request list

Microphone button with Microphone status LED
- **Red**: microphone is active
- **Green**: microphone is in request

Microphone status LED
- **Red**: microphone is active
- **Green**: microphone is in request

Screw lock microphone connector

PRIOR button (only on chairman unit)
- **Press and hold**: temporarily mutes the microphones of all active units
- **Press and release**: deactivates the microphone of all active units

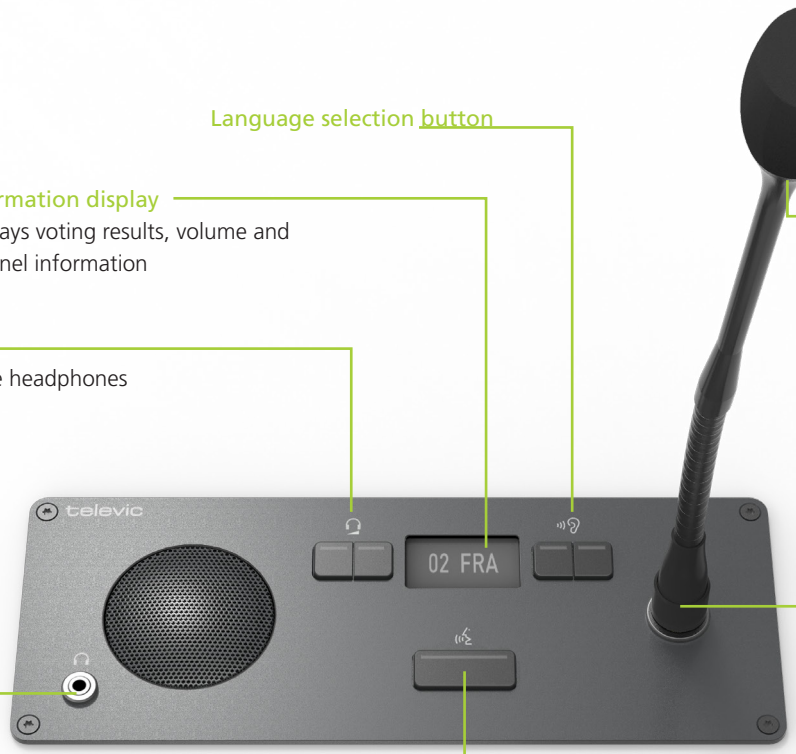

Language selection button

Information display
Displays voting results, volume and channel information

Volume control
Change the volume of the headphones

Headphone connector

Microphone button with Microphone status LED
- **Red**: microphone is active
- **Green**: microphone is in request

Microphone status LED
- **Red**: microphone is active
- **Green**: microphone is in request

Screw lock microphone connector

Product Range Applicability

- Confidea F-CD (71.98.0511)
- Confidea F-DD (71.98.0501)
- Confidea F-CI (71.98.0513)
- Confidea F-DI (71.98.0503)

All information copyright Televic Conference, 2018.
Televic reserves the right to change this document without notice.
Version 1.0, 26 September, 2018

Televic Conference
Leo Bekaertlaan 1
8870 Izegem, België

+32 51 30 30 45
conference@televic.com
www.televic-conference.com