

CONFIDEA FLUSHMOUNT UNITS

USER GUIDE

VERSION 3.0 (SEPTEMBER 2026)



Copyright Statement

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without the prior written permission of the publisher, except in case of brief quotations embodied in critical articles or reviews. Contents are subject to change without prior notice.

Copyright © 2026 by Televic Conference NV. All rights reserved.

The authors of this manual have made every effort in the preparation of this book to ensure the accuracy of the information. However, the information in this manual is supplied without warranty, either express or implied. Neither the authors, Televic Conference NV, nor its dealers or distributors will be held liable for any damages caused or alleged to be caused either directly or indirectly by this book.

Trademarks

All terms mentioned in this manual that are known to be trademarks or service marks have been appropriately capitalized. Televic NV cannot attest to the accuracy of this information. Use of a term in this book should not be regarded as affecting the validity of any trademark or service mark.

CONTENTS

The Confidea Flushmount Family 4

 Chairperson Units 4

 Delegate Units 5

How to Use the Confidea Flushmount Units 7

THE CONFIDEA FLUSHMOUNT FAMILY

The Confidea Flushmount family consists of different types of flushmount units. Chairperson units differ from the delegate units as they have some additional control buttons. Each of these units comes in different versions, depending on the options they have.

Chairperson Units

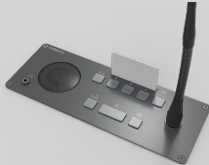
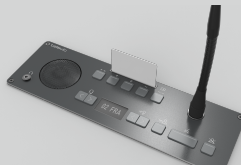
Image	Name	Description
	Confidea F-CD: - F-CD (71.98.0511) - F-CD Mike (71.98.0541)	Chairperson unit with discussion capabilities only (with PRIOR and NEXT buttons)
	Confidea F-CV: - F-CV (71.98.0512) - F-CV Mike (71.98.0542)	Chairperson unit with discussion capabilities, voting buttons and badge reader
	Confidea CI: - F-CI (71.98.0513) - F-CI Mike (71.98.0543)	Chairperson unit with discussion capabilities and language selection
	Confidea CIV: - F-CI (71.98.0514) - F-CI Mike (71.98.0544)	Chairperson unit with discussion capabilities, language selection, voting buttons and badge reader

Image	Name	Description
	Confidea CM: - F-CM (71.98.0515) - F-CM Mike (71.98.0545)	Chairperson unit with only PRIOR and NEXT buttons and a microphone button

Delegate Units

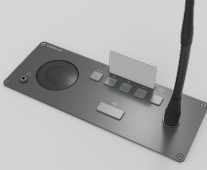
Image	Name	Description
	Confidea F-DD: - F-DD (71.98.0501) - F-DD Mike (71.98.0531)	Delegate unit with discussion capabilities only
	Confidea F-DV: - F-DV (71.98.0502) - F-DV Mike (71.98.0532)	Delegate unit with discussion capabilities, voting buttons and badge reader
	Confidea F-DI: - F-DI (71.98.0503) - F-DI Mike (71.98.0530)	Delegate unit with discussion capabilities and language selection
	Confidea F-DIV: - F-DIV (71.98.0504) - F-DIV Mike (71.98.0534)	Delegate unit with discussion capabilities, language selection, voting buttons and badge reader

Image	Name	Description
	Confidea F-CS (F-71.98.0551)	Flushmount delegate unit with language selector only
	Confidea F-DM: - F-DM (71.98.0505) - F-DM Mike (71.98.0535)	Flushmount delegate unit with only a microphone button

HOW TO USE THE CONFIDEA FLUSHMOUNT UNITS

Below you can find a description of all buttons and functions available on all the Confidea flushmount units. The unit shown below contains all possible buttons and functions (Confidea CIV). A color code depicts which functions are available with what type of unit:

- > **Green:** available on every Confidea discussion unit
- > **Blue:** only available on units that support interpretation
- > **Orange:** only available on units that support voting
- > **Red:** only available on chairperson units

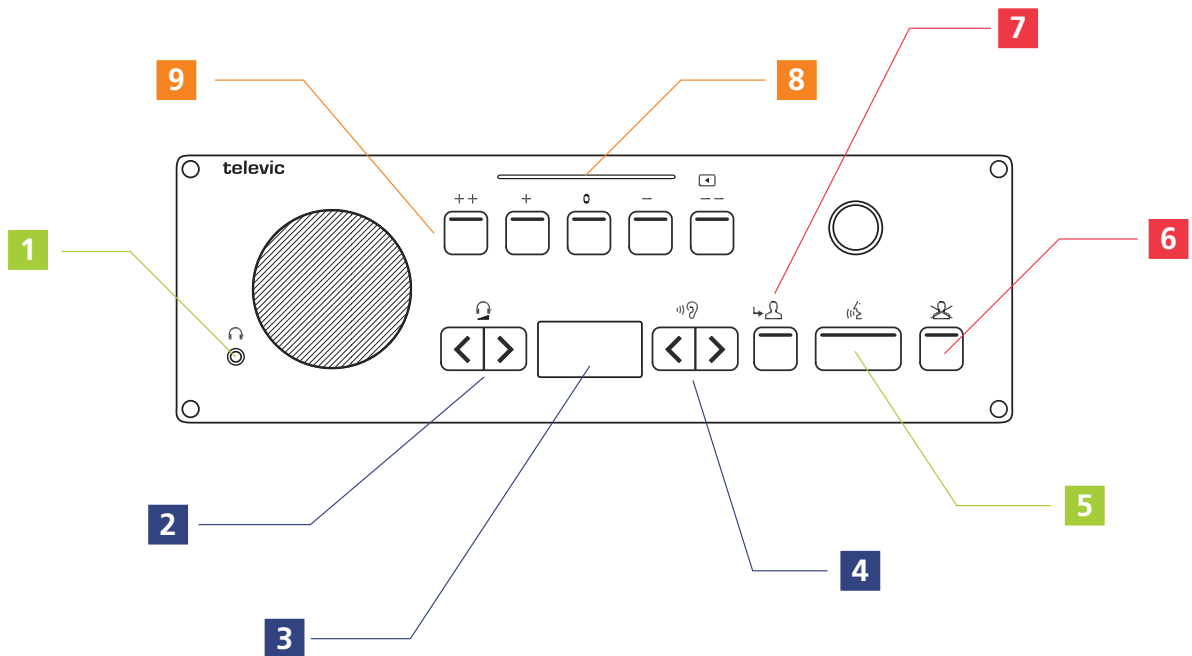


Figure 1-1 Top view of the Confidea flushmount unit

You can find the following functions on the Confidea flushmount unit:

1. **Headphone connector**
2. **Volume control:** changes the volume of the headphones, you can see the volume level on the information display
3. **Information display:** displays volume and channel information

4. **Language selection button**: press the buttons to select the language you want to hear. You can see the selected language on the information display.

5. **Microphone button with microphone status LED**: press to activate or deactivate the microphone

- > **Red**: microphone is active
- > **Green**: microphone in request

6. **PRIOR button** (*chairperson only*):

- > **Press and hold**: temporarily mutes the microphones of all active units
- > **Press and release**: deactivates the microphone of all active units

7. **NEXT button** (*chairperson only*): grants the floor to the next delegate in the request list

8. **RFID card reader**: insert your badge to identify yourself

9. **Voting buttons**: a unit can have three or five voting buttons, the LEDs on the voting buttons light up during a voting session, indicating the available voting buttons.



In case authority voting has been configured for a delegate with a Flushmount unit, one of the voting buttons will be used as a toggle button.

TELEVIC CONFERENCE

Leo Bekaertlaan 1

8870 Izegem

Belgium

+32 51 30 30 45

GET IN TOUCH

