

D-CERNO AE

UPDATE PROCEDURE

LATEST UPDATE: 2024-10-04 (V.1.3.1)



Copyright Statement

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without the prior written permission of the publisher, except in case of brief quotations embodied in critical articles or reviews. Contents are subject to change without prior notice.

Copyright © 2024 by Televic Conference NV. All rights reserved.

The authors of this manual have made every effort in the preparation of this book to ensure the accuracy of the information. However, the information in this manual is supplied without warranty, either express or implied. Neither the authors, Televic Conference NV, nor its dealers or distributors will be held liable for any damages caused or alleged to be caused either directly or indirectly by this book.

Trademarks

All terms mentioned in this manual that are known to be trademarks or service marks have been appropriately capitalized. Televic NV cannot attest to the accuracy of this information. Use of a term in this book should not be regarded as affecting the validity of any trademark or service mark.

CONTENTS

Document history	4
Getting started	5
About This Document.....	5
D-Cerno AE Update Procedure	6

DOCUMENT HISTORY

Version	Date	Description
1.2	2024-10-04	Release version 1.3.1
1.1	2024-09-10	Release version 1.3.0
1.0	2024-05-07	Release version 1.2.0

GETTING STARTED

About This Document

The main purpose of the D-Cerno update procedure is to describe how to update the D-Cerno AE system.

As a result, this document is intended for **distributors, integrators, installers, end users** and anyone else who needs to perform a software update of a Plexus system.

Throughout this guide we use icons to designate different types of information:

	This is a note. A note gives additional information, such as the meaning of the color of the microphone LEDs. A note also provides information that may only be applicable to some situations.
	This is a tip. A tip gives you an alternative way to do a particular step or procedure, or lets you know of an option that you may find helpful.
	This indicates that something is very important. Important information is something that you need to do in order to accomplish a certain task.
	This provides safety precaution information, that is, information that you need to be careful about to prevent potential problems when using our systems.

D-CERNO AE UPDATE PROCEDURE

Carefully execute the following steps in order to guarantee a smooth upgrade towards the latest version:



We recommend to use the latest version of the Chrome browser.

Make sure that all D-Cerno devices which are part of the system are connected to the D-Cerno AE central unit. It is good practice to even connect and update the spare units.


If you have purchase the new D-Cerno AE central unit to be used with D-Cerno discussion units that were already in stock, you need to upgrade all the discussion units to the latest version.



It is not recommended to update the system when a meeting is ongoing. In case you try to update the system during a meeting, a warning message will be displayed.

1. Switch on the central unit. Open the web server. If it is not connected to the server via DHCP, use the IP address of the engine (default: 192.168.0.20).
2. Log in as **Technician** and click on the **Devices** icon  in the vertical menu on the left. You can see the version numbers of all the devices connected to your system. If you do not see the version numbers, please contact Televic Conference's support:


<https://www.televic.com/en/conference/support/support#contactsupportteam>

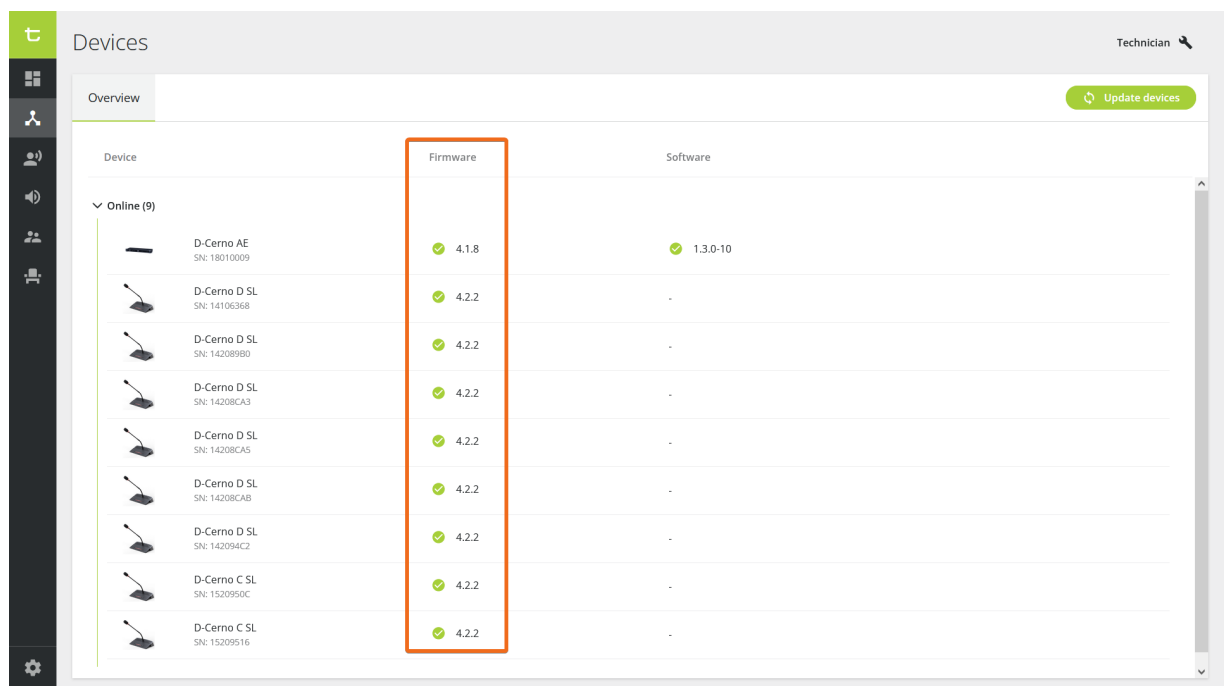

Device	Firmware	Software
D-Cerno AE SN: 18010009	✓ 4.1.8	✓ 1.3.0-10
D-Cerno D SL SN: 14106368	✓ 4.2.2	-
D-Cerno D SL SN: 14208980	✓ 4.2.2	-
D-Cerno D SL SN: 14208CA3	✓ 4.2.2	-
D-Cerno D SL SN: 14208CA5	✓ 4.2.2	-
D-Cerno D SL SN: 14208CAB	✓ 4.2.2	-
D-Cerno D SL SN: 142094C2	✓ 4.2.2	-
D-Cerno C SL SN: 1520950C	✓ 4.2.2	-
D-Cerno C SL SN: 15209516	✓ 4.2.2	-

3. Go <https://www.televic.com/en/conference/dcerno-ae-software-updates> to find the latest updates. Download the appropriate update file(s).


- Go back to the **Devices** page in the Technician section of the web browser. The following page opens:

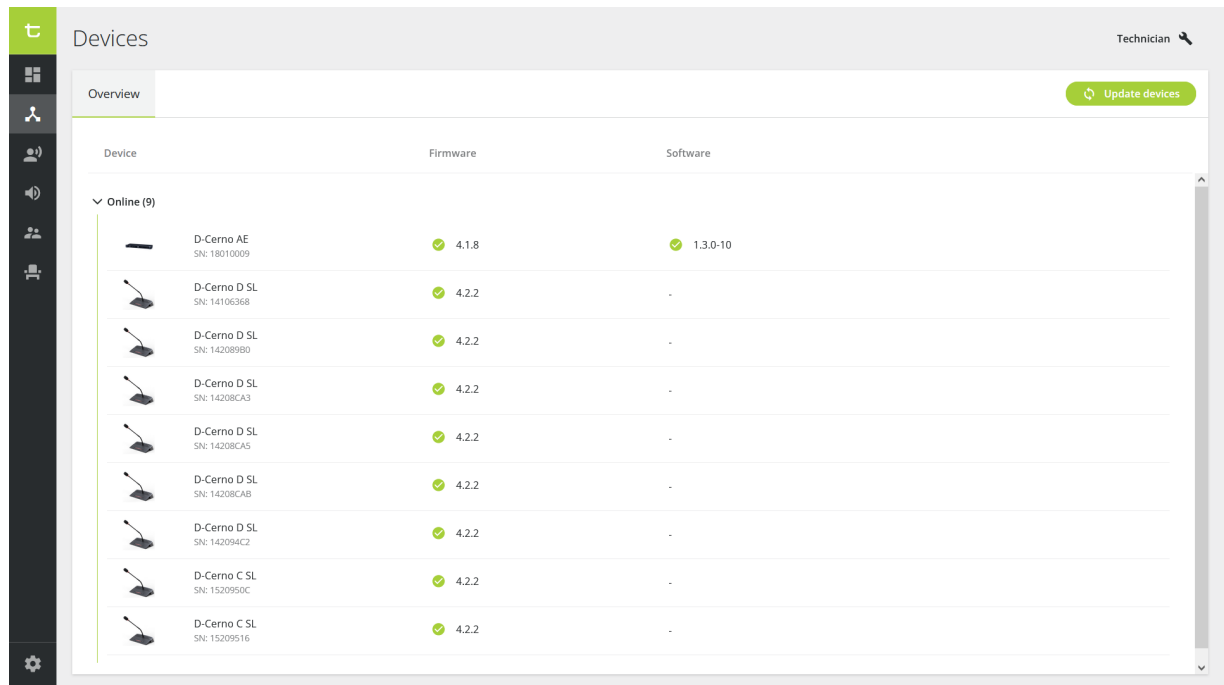

The screenshot shows the 'Devices' page in the Technician section. The page has a sidebar with navigation icons and a main content area. The main content area has a header 'Devices' and a sub-header 'Overview'. A green 'Update devices' button is in the top right corner. Below the header is a table with columns 'Device', 'Firmware', and 'Software'. The table lists 9 online devices, all of which are D-Cerno AE or D-Cerno D SL models, with firmware versions 4.1.8 or 4.2.2 and software versions 1.3.0-10 or 1.3.0-11.

Device	Firmware	Software
D-Cerno AE SN: 18010009	✓ 4.1.8	✓ 1.3.0-10
D-Cerno D SL SN: 14106368	✓ 4.2.2	-
D-Cerno D SL SN: 14208980	✓ 4.2.2	-
D-Cerno D SL SN: 14208CA3	✓ 4.2.2	-
D-Cerno D SL SN: 14208CA5	✓ 4.2.2	-
D-Cerno D SL SN: 14208CAB	✓ 4.2.2	-
D-Cerno D SL SN: 142094C2	✓ 4.2.2	-
D-Cerno C SL SN: 1520950C	✓ 4.2.2	-
D-Cerno C SL SN: 15209516	✓ 4.2.2	-

- Click the **Update devices** button in the upper right corner. The following window opens:

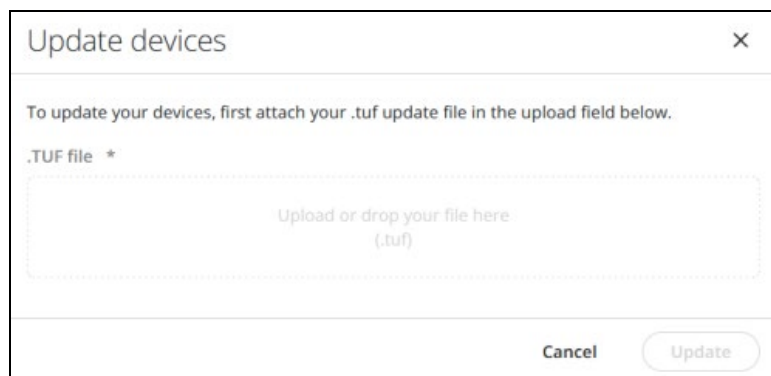

The screenshot shows a dialog box titled 'Update devices'. It contains a text field for uploading a .tuf file and buttons for 'Cancel' and 'Update'.

To update your devices, first attach your .tuf update file in the upload field below.

.TUF file *

Upload or drop your file here
(.tuf)

Cancel Update

- Select the *.tuf file, click the **Update** button and follow the steps to upgrade both the central unit as well as the discussion devices.
- When the update is complete, **reboot your system** and **refresh** the page manually.

